Installing Your Phone

To install using two 2-line phone jacks and two 2-line phone cords (included with your phone):

To install using four single-line phone jacks and two 2-line couplers:

NOTE: Make sure that the phone line being used as Line 1 is the same on each phone in your system.

Using the 25420 with your RCA 4-line system:

After you plug the phone lines into your 25420, it will automatically search for other RCA 4-line phones.

When it finds the other phones, it is assigned a unique extension number between 1 and 16.

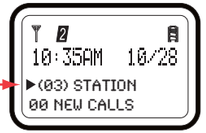

This will be the number used for intercom calls and when the auto attendant on the RCA 25425RE1 directs calls.

If you would like more information on changing the extension number of your 25420, please see page 18 of your instruction booklet.

Note: the 25420 works with RCA 4-line models 25413RE3, 25414RE3, 25415RE3, 25423RE1, 25424RE1 and 25425RE1.

quick start guide

25420

RCA ViSYS™

www.rca4business.com

For Customer Assistance
call 1-800-511-3180

RCA is a trademark of RCA Trademark Management S.A., used under license.

Button Layout

Easy to Navigate Menus

1. Use the Vol (+ or -) buttons to move the arrows in menus.
2. Use menu to access the menu.
3. Use Select/Save to enter submenus and to save settings.
4. Use exit to go back one menu level.

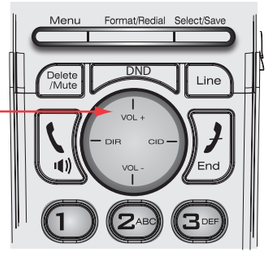

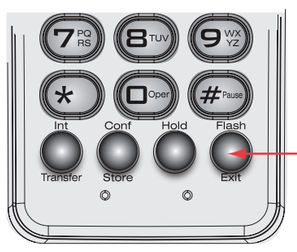

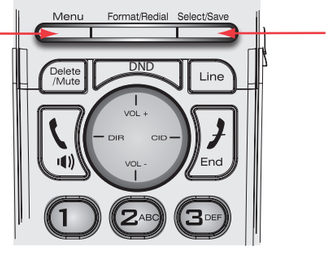

Setting Your Phone ID

1. Use the Vol (+ or -) buttons to scroll up or down to PHONE SETTINGS.
2. Press the Sel/Save button.
3. Use the Vol (+ or -) buttons to scroll up or down to PHONE ID.
4. Press the Sel/Save button.
5. Press the Sel/Save button again to automatically set the phone ID, or use the keypad to enter your desired phone ID.